

imo *Dash*

User Manual

Introduction

© 2017. All rights are reserved. No part of this document may be reproduced without permission.

While all efforts have been made to ensure the accuracy of all contents, we assume no liability for errors or omissions or statements of any kind in this manual, whether such errors or omissions or statements result from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.






Protect our environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.






Welcome

Congratulations on the purchase of your IMO Dash phone. Our User Manual should help you with everything you need to maximize your enjoyment of the device.

For Your Safety

Before using your handset, please read the following important information.


	Do not switch your handset on when the use of wireless devices is prohibited or when the wireless device may cause interference or danger.
	Do not use your phone while driving.
	Follow relevant rules or regulations in hospitals and health care facilities. Switch your phone off near medical devices.
	Switch your phone off in aircraft. The radio signal from it may cause interference in signals of the aircraft.
	Switch your phone off near high-precision electronic devices. It may

	affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel may service or repair the phone.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
	Do not expose your handset to high-temperatures or use it in a place with flammable gases such as a petrol pumps.
	Observe any laws or regulations on the use of mobile phones. Respect others' privacy and legal rights when using your phone.

Improper use could invalidate the warranty! These safety instructions also apply to the original accessories.

Handset Overview

Key functions:



Key	Function Description
Left Menu Key (A)	Access the main menu screen, usually used for the “OK” prompt.
Central Navigation Key (B)	Can be used to access the menu and the main key to navigate through the phones various menus by moving the cursor up and down, left and right.
Right Contacts Key (C)	Shortcuts to your contacts menu, also used as the “Back” key in most menus.
Call Key (D)	Quick access to your call log and to make or answer an incoming call.
End Call / Power Key (E)	Hold down to turn on/off your phone, end or reject a call, puts the phone in stand-by mode from any menu.
* Key (F)	Press to enter punctuations and symbols in text input mode. .
# key (G)	Long press to activate silent mode and reverse.

Powering On/Off your IMO Dash

- Press and hold down the End Call/Power key (E) for around 5 seconds until you see the IMO logo appear on the screen. It will then take a few seconds to fully power up and the home screen to appear.
- The phone will then automatically search for your available networks and be ready for you to explore.
- To turn off your phone press the same key (E) for 3 seconds. Your IMO Dash will then power down.

Memory Card

Your IMO Dash can take up to an additional 32GB via a microSD card (sold separately). The memory card is a pluggable additional storage for your mobile phone. To insert the memory card, remove the back cover and battery and insert your SD card into the slot next to your SIM card.

Charging the Battery

We recommend you fully charge your battery before your first using of the IMO Dash handset.

- Insert the supplied USB power lead securely into the plug supplied.
- Insert the plug into a standard UK AC wall socket.
- Connect your mobile to the mini USB connector at the opposite end of the USB cable. Your phone should now be charging.
- You can see this by the battery icon at the top of the screen showing charge going into your phone.
- We recommend charging initially for 2 – 3 hours.

Menu directory

To access your main menu where you will find your contacts, call log, camera, etc, simply press the top Left Menu Key (A) on your phone. Here you will see 12 icons showing the different functions on your handset. You can navigate around these 12 icons easily by using the large Central Navigation Key (B).

Contacts

The contacts icon 1 on your mobile phone shows you all your saved names and numbers.

To save a new number just type the number into the keypad, press the Options key (A) and choose “Add to contacts”. You have the choices of “Add to new contact” and “Add to existed contact”. You then have the option to save the contact either to the phone or onto your SIM card. Select one of these and the new contact menu will appear. Use the Central Navigation Key (B) to select NAME and then use the letters on the keypad to type the name of your choice. Press the # key (G) while input to change the text input mode. When finished press OK and then SAVE.

To access your saved numbers just press the top Right Contacts Key (C) and use your Central Navigation Key (B) to scroll down to your selected contact. Press key (B) to open the details of the contact, scroll down to select the number by using key (B) and press again to call.

By pressing the **OPTIONS** key (A) you can either call, edit your contacts details, send them a text message, or delete your contact. Don't worry if you make a mistake, just press the **BACK** key (C) which will take you back one step each time.

Call Logs

Icon 2 is your call log menu. This lists all the calls you have made in chronological order. It shows the calls you missed, dialed and received. You can clear your call log at any time by navigating to **DELETE ALL** and pressing **OK**.

Settings

Icon 3 is your settings button.

From here you can change your **CALL SETTINGS**, including call divert, call waiting, call barring and hide your number, so the person you are calling cannot see your number on their phones.

PHONE SETTINGS is where you can change the date and time, change your default language, add your most frequently used functions to the home screen under **Shortcut settings**, or reset your device back to the original factory settings.

DISPLAY SETTINGS: From here you can change your phone wallpaper (the background picture on your home screen) and other screens, and your contrast and backlight settings.

CONNECTION SETTINGS menu enables you to select data roaming services if you need to outside of the UK.

Internet

Icon 4 is your internet access button. To use this make sure you have a data plan from your network operator. You need to type the URL (full website

address) into the top menu line and press select. You can also add bookmarks and offline pages from here.

The IMO Dash device is not Wi-Fi enabled.

Message

Icon 5 is your messaging menu. This shows all your text messages in your INBOX, messages you have sent in your SENTBOX, and any unfinished messages in your DRAFTS. In TEMPLATES you can choose from popular messages to send and add your own.

To send a message you can either go into your CONTACTS menu and select the person you want to send the message to.

Then navigate to the NUMBER not the name and select OPTIONS.

The 3RD option is WRITE MESSAGE. Select this and select SMS to send a text or MMS to send a photo. Once finished hit the send button and you're done.

You can check if it has been sent by going into the messages menu and check your SENTBOX. Alternatively you can go into MESSAGES, WRITE MESSAGE, SMS or MMS then select the contact from your list.

While writing a message, press the * Key (F) to insert the punctuations or symbols, press the # key (G) to choose the text input mode.

Multimedia

Icon 6 is your Multimedia menu. You can listen to the FM radio, Record and watch your short videos, access your photos and your saved music, and make sound recordings.

FM RADIO: To use the FM radio you will need your headset to be plugged into your phone as this acts as your antenna. Once plugged in select search and wait for a few moments. You should then be able to access most FM radio stations in your area once the search has finished. Remember as with all radio signals you will need to be in a good reception area.

DV. (Digital Video): To record a short video select DV from the Multimedia menu and press the RECORD button to capture your video. You can also press the OPTIONS (A) button and then View Video Directory which is where all your saved videos can be accessed from.

PHOTO ALBUM: From here you can go straight into camera mode and take a photo or access all your saved photos. By pressing the top of the capture button (B) you can zoom in to up to 8x. Press the bottom of the key (B) to zoom out. Remember to select SAVE after you have captured your image.

AUDIO: This is where you can find and access all your saved music and audio files. You can shuffle, repeat and set a ring tone.

VIDEO PLAYER: From here you can play all your video recordings, play them full screen, and adjust the brightness etc.

RECORDER: Record and save conversations and audio files.

Camera

Icon 7 is for opening your Camera menu. Simply select it and your camera will open. By pressing the top of the capture button (B) you can zoom in up to 8 X.

Also by pressing the left or right of the capture button (B) you can access the camera settings menu where you can:

- Change from camera to video mode
- Turn the flash on and off
- Alter the size of your image
- Activate night mode
- Adjust the brightness, contrast and exposure
- Change to continuous shoot mode
- Change the white balance
- Set a capture delay up to 10 seconds
- Change the colour effects

My Files

Icon 8 opens the My Files menu and shows all your files saved on your phone.

Organizer

Icon 9 opens your organizer including your Torch, Calendar, Calculator, Alarm Clock and World clock.

- **TORCH:** Select the torch icon and scroll between turning your torch on and off
- **CALENDAR:** Select a date on the calendar and enter the event and time required. Your phone will remind you when this is due via an alarm alert
- **CALCULATOR:** Helps with addition, subtraction, division and multiplication
- **CLOCK:** Set up to 3 different alarms via the alarm clock. Select the alarm and then change the wake up message, time of alarm, ringtone and repeat frequency and press OK to set.
- **WORLD CLOCK:** Select world Clock, and then **OPTIONS** and add city. Then scroll down to your required location and select. This will add the time in your requested location to your list.

Application

Icon 10 fast tracks you to the Facebook application. You will need a data package from your network provider to access this. You can use your current log in details or set up a new account from here.

Profiles

Icon 11 opens your handset profiles. You can select from General, Silent, Meeting, Indoor or Outdoor profiles which will alter the ringtone volume, brightness etc. Set what is best for you at any given time.

Bluetooth

Icon 12 turns your Bluetooth on and off and lets you pair with other Bluetooth devices.

To connect to other Bluetooth devices first make sure the other device has Bluetooth turned on and is “visible” to your IMO Dash.

- Select Bluetooth by ticking the Bluetooth box
- Select Bluetooth visibility by ticking the Bluetooth visibility box
- Scroll down to Paired device and select
- Then select Add new device

Your IMO dash will search for devices. When it finds the device you would like to connect to, select this device. You may be prompted to enter its password which you will need to know.

Once paired and connected you can safely transfer your files wirelessly, listen to music or make hands free calls.

Problems and Solutions

To save your time if you have any problems here is a quick troubleshooting guide. Please try the fixes before you return to your reseller.

Unable to turn on the phone

- Hold down the power button continuously for at least 10 seconds.
- Check battery is correctly installed. Remove the back cover and battery, and reinstall.
- Check whether the battery is exhausted, and check all connections both on your device and wall socket.

SIM card not recognized

- Remove your SIM card and wipe to clean the metal contact points.
- Re-insert your SIM and power up your phone.

Call quality is poor.

- Please check whether the volume needs adjusting.
- Use of mobile phones in poor reception areas, such as high-rise buildings or basement is common. Please try in a good outdoor reception area.

Contacts cannot contact you.

Make sure the phone is switched on and connected to the network.

You cannot make a call.

- Check your balance is in credit.
- Check you are in a good reception area.
- Try a few numbers as there may be a problem with the device of the person you are trying to contact.